

How to Test NHR-1500 DSC Receiving with GMDSS tester

1. RF radiation


Method 1

Insert a screw driver into TR ANT port, radiate from GMDSS tester.



Method 2

Touch the WK ANT port with GMDSS tester antenna.

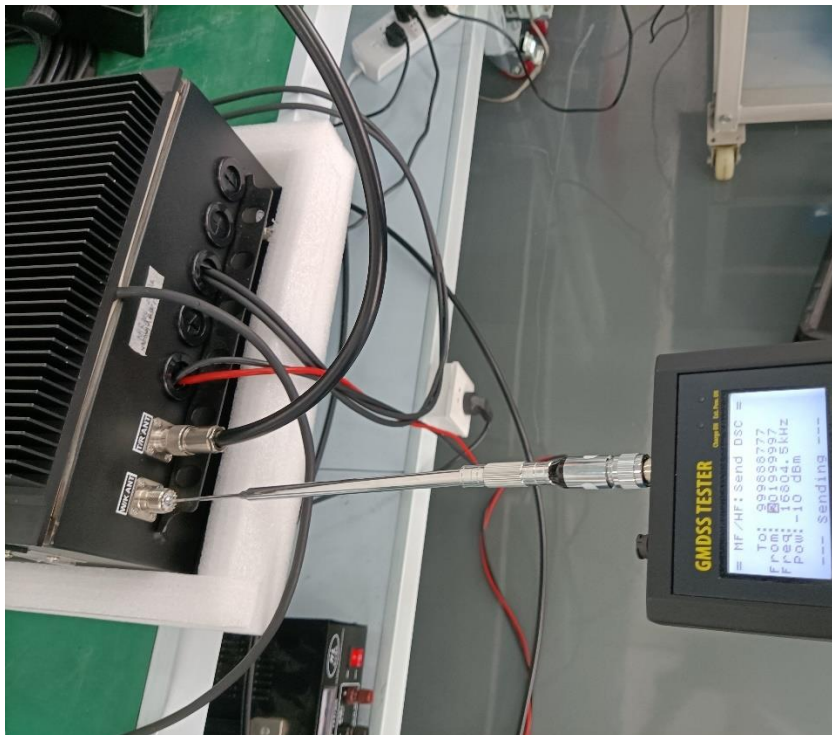

Method 3

Radiate RF signal to TR antenna.



2. GMDSS tester



Select Safety message, one frequency from 6 distress frequency.

To MMSI should be vessel's MMSI.

After "Send", NHR-1500 can receive DSC message as below picture.

