


## How to disassemble NVR301 PCB

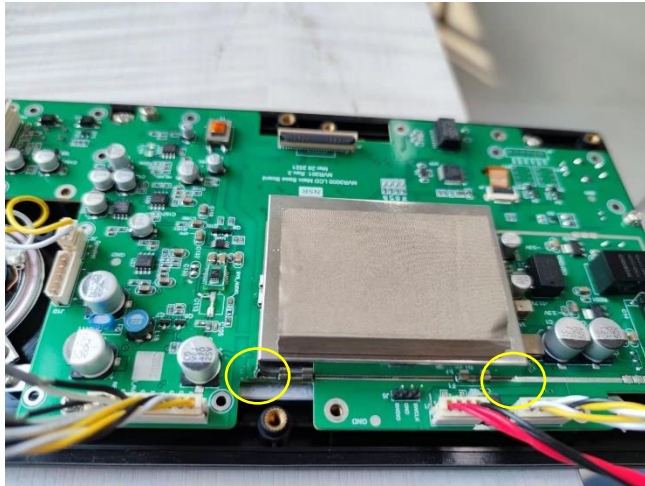

Remove the solder from the four corners of the shield



Remove the shield and soft cable of LCD&touch pad.  
Remove all other cable.