



## How to Change AC of 220V and 110V

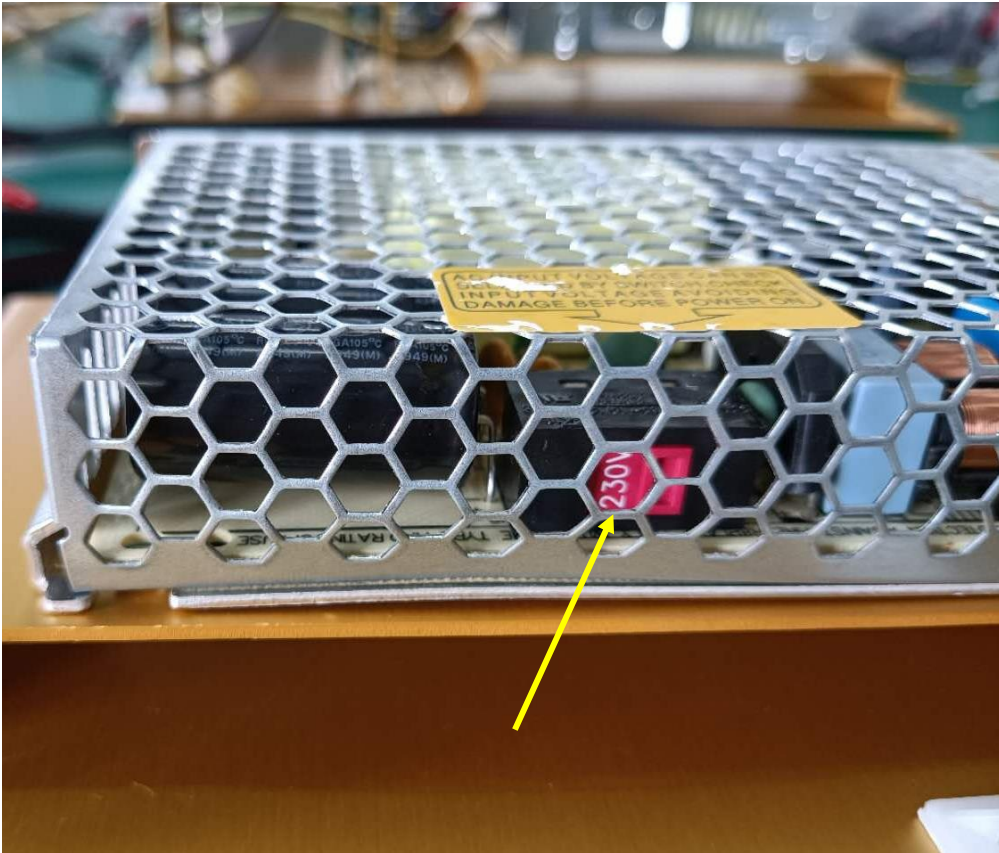

Move the switch to 230V for AC220V

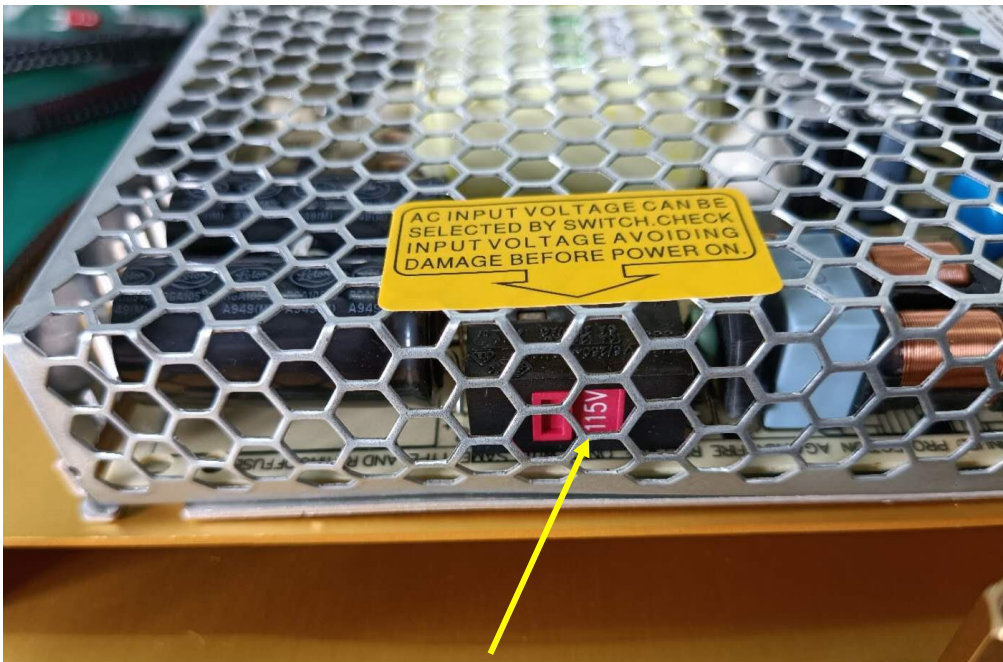

Move the switch to 115V for AC 110V