


How to Config More than One DEU

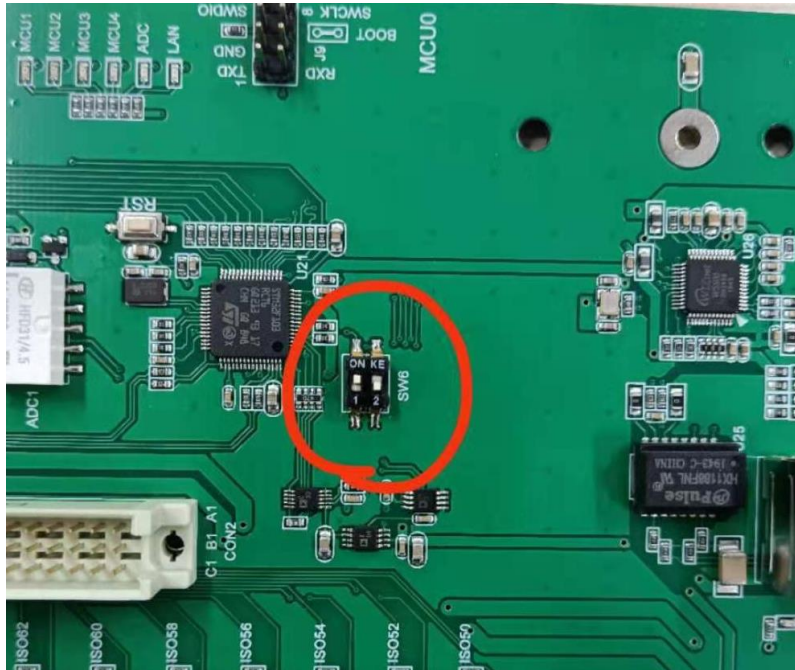

Choose the SW6 according to below table

	SW6-1	SW6-2
DEU1	ON	ON
DEU2	ON	OFF
DEU3	OFF	ON
DEU4	OFF	OFF

Maximum 4 DEUs can be configed.

