How to Set Passive or Active WR Antenna of NHR-1500

Step 1

Find out WR PCB.

Step 2

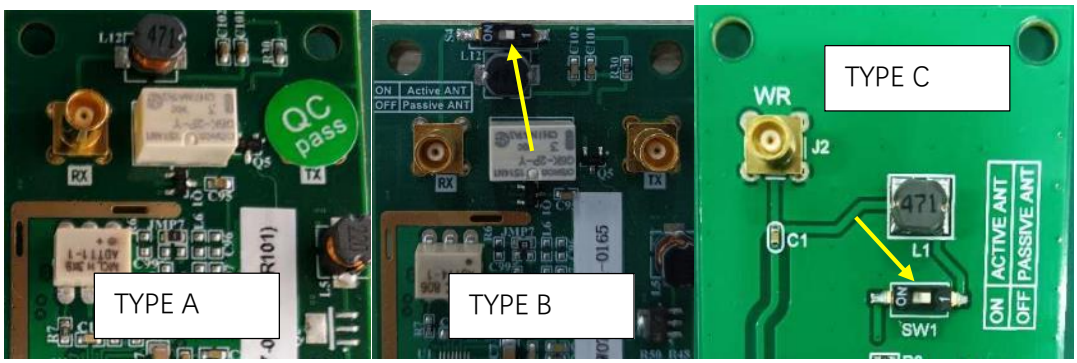

There are 3 kinds of WR PCB.

TYPE A: Only Passive antenna is supported.

TYPE B and **TYPE C**: DIP switch **ON for Active antenna**. DIP switch **OFF for Passive antenna**.