


How to change TCXO of NVR-3000




Adjust the temperature of soldering machine to 360 degrees.



Heating the TCXO by hot air gun to remove, then install new TCXO by hot air gun.
The mark point at TCXO should be at correct direction.

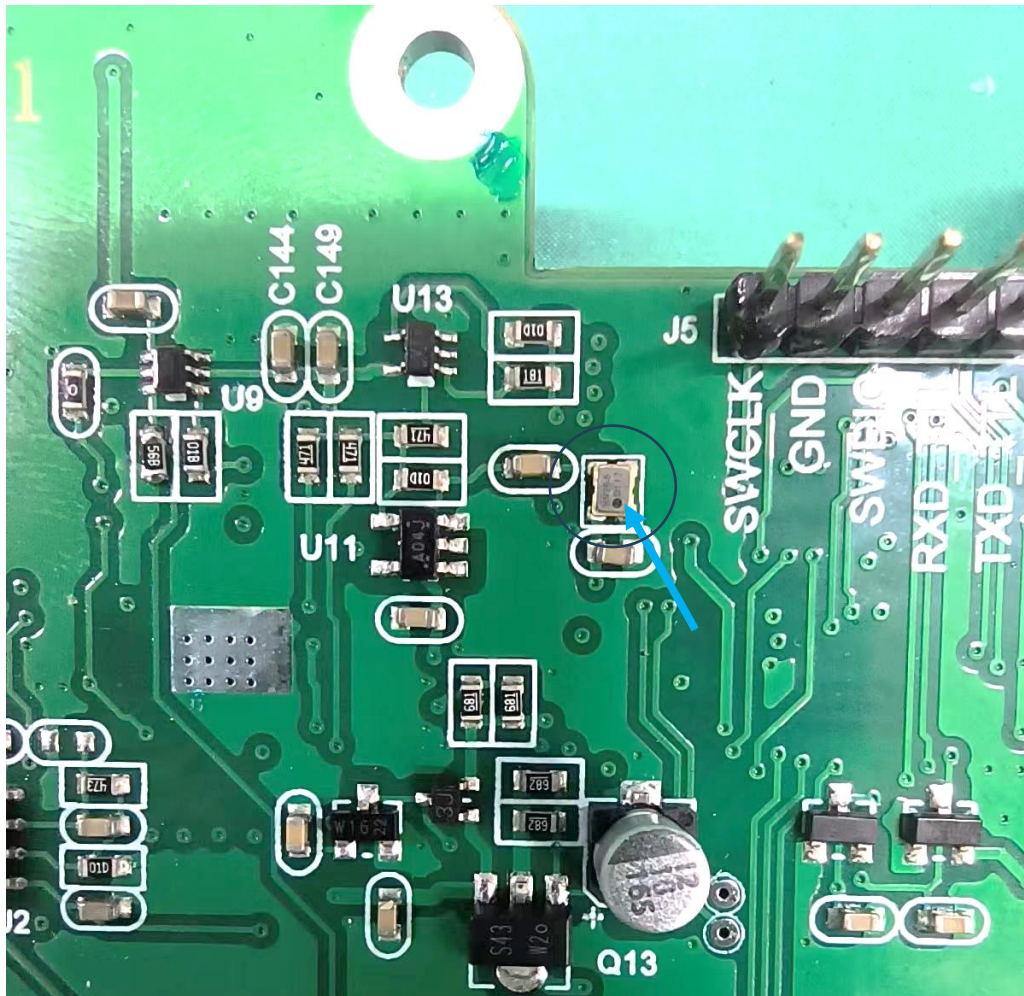

- Using an oscilloscope to measure crystal oscillator frequency.
- 25.6MHz is correct.

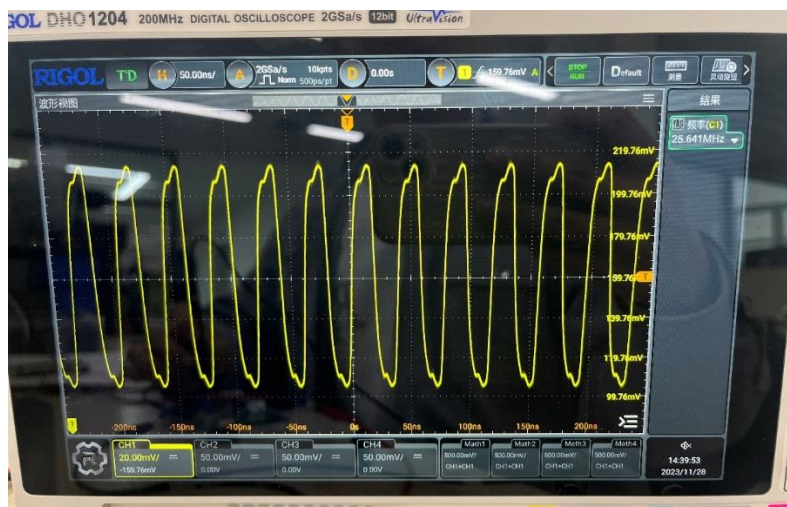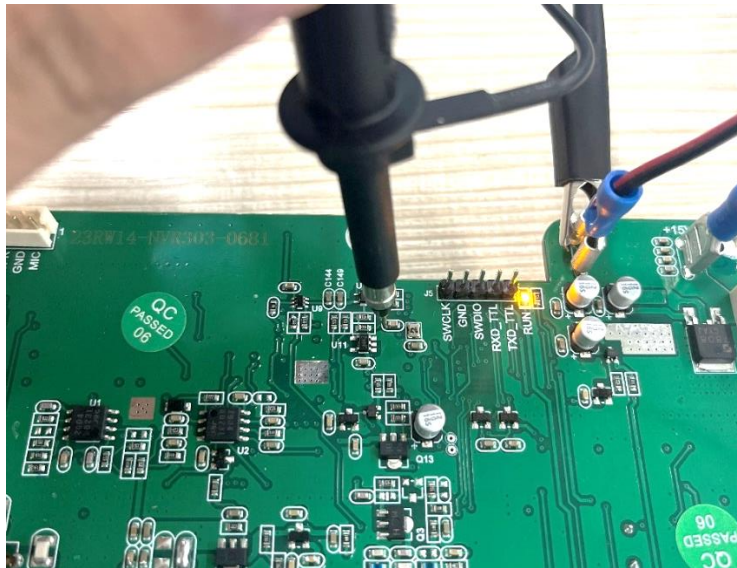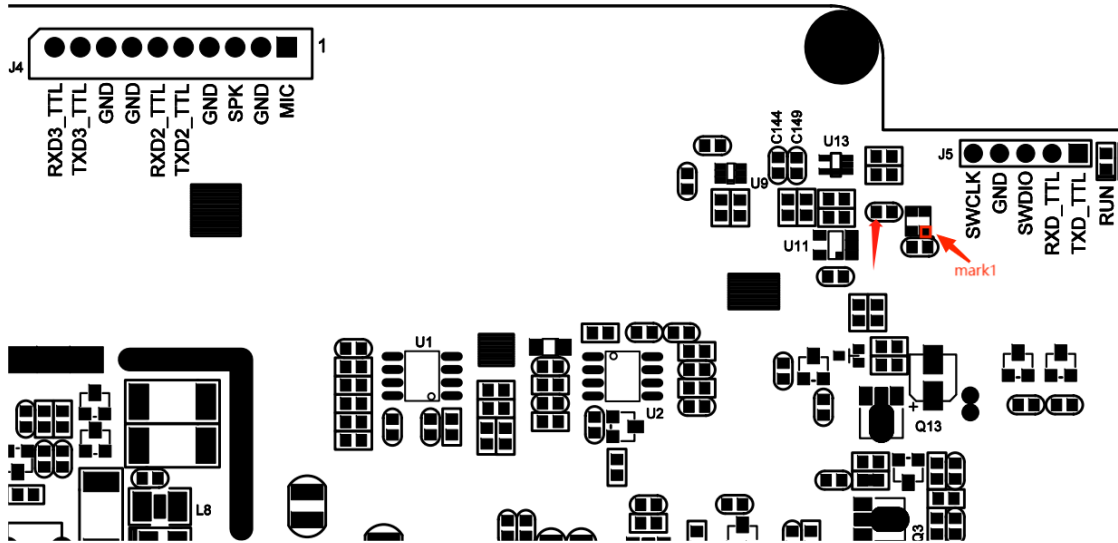

After changing TCXO, upgrade the Boot and App of PA board.